


NOTES:

1. ALL JOINTS FROM MAIN TO HYDRANT SHALL BE RESTRAINED.
2. VALVE BOX AND COLLAR INSTALLED PER DETAIL W4.
3. REMOVE CHAINS AFTER INSTALLATION OF NEW HYDRANT.
4. CONNECT TRACER WIRE TO WIRE ON MAIN W/ SPLICE CONNECTOR.

FIRE HYDRANT FOR DEEP BURY MAINS

STANDARD
CONSTRUCTION
DETAILS

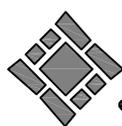

CITY OF
savannah

WATER RESOURCES AND PUBLIC WORKS BUREAU
Planning & Engineering

SCALE: N.T.S.

DATED: JAN 2017

PLATE NUMBER:

W37